



MOUNTAIN ALARM

FIRE PROTECTION SERVICES, J.D. DAVIS COMPANY, INC., APEX SECURITY

Congratulations on your new alarm detection system. The system is very simple to operate. Mountain Alarm has tried to anticipate some of your questions. The following operating instructions will help you familiarize yourself with the **GE NX-8E**.

ZONE DESCRIPTIONS

1. _____
2. _____
3. _____

4. _____
5. _____
6. _____

7. _____
8. _____

A. KEYPAD OPERATION:

EXIT – Push this button to arm the system when there are no people or large pets inside and you want the interior monitored.

STAY – Push this button to arm the system when you are inside the premise and you want protection around the perimeter.

DISARM – To disarm the system enter your keypad code. The armed light will go off and the tone will stop.

NOTE: *The keypad will pulse when one or more of the following conditions are detected: Zone or Box Tamper, Low Battery or AC Power Fail, or Expander Trouble. To silence enter your keypad code. Contact Mountain Alarm for service if the trouble condition still exists.*

B. EMERGENCY ACTIVATION KEYS



Fire



Auxiliary Emergency



Police

FIRE – The fire system is activated automatically or press the fire key (as shown above) for 10 seconds to activate the fire alarm. If your system is monitored the appropriate action will take place.

POLICE/AUXILIARY EMERGENCY – These keys are used for Panic/Hold-up or other emergency. These keys will sound an audible alarm when pressed for 10 seconds. If your system is monitored the appropriate action will take place.

C. SYSTEM OPERATION:

CHIME – To change the chime your system must be in the disarmed state.
To turn (the chime) on or off press the chime key.

BYPASSING ZONES -

- STEP 1 Your system must be in the Disarmed state to Bypass zones.
- STEP 2 Open (all) the zone(s) to be bypassed.
(i.e. if you want to bypass the master bedroom window go and open it.)
- STEP 3 There are two arrow keys to the right of the LCD screen.
These arrows will allow you to scroll through all the open zones.
- STEP 4 When the zone you want to bypass is displayed on the screen press the bypass key (this is a toggle key, so if you make a mistake just hit the bypass key again and it will undo the bypass)
- STEP 5 Activate your system. **NOTE: All zones will automatically be unbypassed each time they system is disarmed.**

E. WHAT TO DO IF THERE IS A FALSE ALARM:

Security or Panic Alarm –

1. Stay calm and go to the nearest keypad. Enter your code to silence the siren.
2. Once the alarm has gone off, you must enter your code a second time to erase the alarm memory and reset the system. The system cannot be armed again until this is done.
3. If the monitoring company calls, give them your name and password.

Fire Alarm –

1. Enter your code to silence the siren.
2. Once the alarm has gone off, you must enter your code a second time to erase the alarm memory and reset the system. The system cannot be armed again until this is done.
3. Once you have cleared the alarm memory press [*]-[7] to clear the fire memory.
4. When the monitoring company calls, give them your name and password.

F. CHANGING OR ADDING USER(S) KEYPAD CODES:

- STEP 1 Your system must be in the Disarmed state to change user codes.
- STEP 2 Press [*]-[5]
- STEP 3 Enter your master code
- STEP 4 The *ready light* will flash
- STEP 5 Enter the 3-digit “user number”. (Caution entering user [0]-[0]-[1] will change the master code)
You must always enter 3 digits, such as [0] - [0] - [3] for user 3 or [1] - [5] - [2] for user 152.
- STEP 6 Enter the new four (4) digit “user code”.
- STEP 7 The *ready light* will flash indicating you are back at Step 4 above.
If the code is rejected, the sounder will beep 3 times.
- STEP 8 If another “user code” needs to be programmed, return to Step 5.
- STEP 9 Press the [#] while the *ready light* is flashing to exit the User Code Programming Mode.

If you have any questions, please call 303-698-2330.